
 







 


































 








 
 








 


 





















Amending database:

	Select first dataset (Cursor), scroll to first dataset
	Copy dataset
	Page up (Cursor), scroll 10 datasets
	List-view
	1 Dataset up (Cursor), Scroll up one dataset
	Mask-Layout
	1 Dataset down (Cursor), Scroll down one dataset
	Open datasets (projects/orders/invoices/Agents)
	Page down (Cursor), scroll down 10 datasets
	Copy dataset into archive
	Select last dataset (Cursor), scroll to last dataset
	Show archive dataset
	Search/sort
	Datatransfer (projects/orders/invoices)
	Search
	Data transfer by e-mail (projects/orders/invoices)
	Fulltext search on database-screen
	Data-export and -import
	New dataset
	Project-Layout (projects)
	Delete dataset
	Print
	Datev export (invoicing)
	Texture into dataset load (amending textures)
	Print all reminders (invoicing)
	Load clipped symbol
	Suggested purchase orders (Purchase order)
	Create contour of clipped symbol
	Insert from clipboard (amending textures)
	Change attributes
	Load new texture (amending textures)
	Rename (amending maintenance article)
	New maintenance order
	Shopping cart
	Into the shopping cart

 
 






 
 
 

 
 






 

























Amending groundplan:

	Zoom /select zoom area
	Activate drawing
	Pan / Move layout
	Zoom layout
	Select layer
	Change attributes
	Styling of walls/tiles
	Redofunction
	Triangle-construction
	Linetype, snap, orthofunction
	Draw wall
	Draw line
	Draw circle
	Draw circle segment
	Draw rectangular
	Draw coloured areas / Fill with colour
	Hatch
	Letter type, font size
	Dimension line
	Draw angle details
	Hammer/break up lines
	Trim
	Stretch/rotate/mirror
	Stretch/shrink line
	Cut drawing element
	Stretch/shrink drawing element
	Move layout
	Determine wallheight
	Copy direction for drawing element
	Copy drawing element
	Angle-coordinates
	Measure distance
	Grouping drawing objects
	Cancel grouping
	Load drawing section
	Save drawing section
	Delete drawing element
	Undo delete of drawing element
	Steplength
	Grid/orthogonalfunction
	Show position numbers [F6]
	Switch off articles [F9]
	Hide hatch [F7]
	Hide dimension-lines [F8]
	Grid
	Fix frame
	Display toolbox
	Refresh







Show drawing/perspective:

	Create e-mail
	Do a snapshot
	Next image-file with project reference
	Previous image-file with project reference
	Select image-file from list

Positioning articles:

	Zoom /select zoom area
	Frontview
	Pan / Move layout
	Zoom layout
	Select layer
	Content of legend
	Change articletexts
	Change attributes
	Articles - search/sort
	Redofunction
	Modify Sideview (Cut)
	Edit 3D-object
	Edit topview of article
	Edit frontview of article
	Rotation-angle 0°
	Rotation-angle 90°
	Rotation-angle 180°
	Rotation-angle 270°
	Get rotation-angle
	Rotate article
	Rowing-up direction
	Copy article(s)
	Cut article
	Cut hole into article
	Stretch/shrink article
	Mirror article
	Stretch article
	Hide article partially
	Print datasheet/special forms for article
	Edit datasheet
	Supplier-Data
	Measure distance
	Grouping of articles
	Cancel grouping of articles
	Load article group
	Save article group
	Shopping cart
	Into the shopping cart
	Delete article
	Undo delete of article
	Steplength
	Grid/orthogonalfunction
	Hide hatch [F7]
	Hide dimension-lines [F8]
	Grid
	Fix frame
	Display toolbox
	Refresh

Positioning articles - Frontview:

	Modify wall attributes for frontview
	Save frontview
	Styling of walls/tiles
	Switch off tiles
	Tilt to the left
	Tilt to the right

Positionnumbers:

	Zoom /select zoom area
	Switch off tiles (frontview)
	Frontview
	3D-positioning of the item-no.
	Pan / Move layout
	Set end of arrows
	Zoom layout
	Show installations specification
	Change articletexts
	Steplength
	Change attributes
	Grid, Crossradius
	Redo function
	Hide hatch [F7]
	Select layer
	Hide dimension-lines [F8]
	Content of legend
	Grid/Orthogonalfunction
	Modify wall attributes for frontview
	Fix frame
	Insert Frontview into groundplan
	Display toolbox
	Styling of walls/tiles
	Refresh

Installations:

	Zoom /select zoom area
	Frontview
	Pan / Move layout
	Zoom layout
	Show installations specification
	Change attributes
	Change articletexts
	Redo function
	Switch: Installation-points
	Switch: Installation-texts
	Switch: Installation-marker
	Switch: Articles
	Switch: Complements
	Empty
	Modify wall attributes for frontview
	Empty
	Styling of walls/tiles
	Switch off tiles (frontview)
	Generate heat-emission-points
	Modify insertion height
	Angle-Coordinates
	Measure distance
	Change installation specifications /installation-legend
	Show fullsymbols
	Show positionsnumbers
	Show installationmarker
	Steplength
	Grid/orthogonalfunction
	Hide hatch [F7]
	Hide dimension-lines [F8]
	Grid
	Fix frame
	Display toolbox
	Refresh

Designing symbol:

	Zoom /select zoom area
	Activate drawing
	Pan / Move layout
	Zoom layout
	Select layer
	Change attributes
	Empty
	Redo function
	Triangle-construction
	Linetype, snap, orthofunction
	Draw wall
	Draw line
	Draw circle
	Draw circle segment
	Draw rectangular
	Draw rectangle with round corner
	Draw coloured areas / Fill with colour
	Hatch
	Letter type, font size
	Draw angle details
	Hammer/break up lines
	Trim
	Stretch/rotate/mirror
	Stretch/shrink line
	Cut drawing element
	Stretch/shrink drawing element
	Dimension line
	Move layout
	Copy direction for drawing element
	Copy drawing element
	Angle-coordinates
	Measure distance
	Grouping drawing objects
	Cancel grouping
	Load drawing section
	Save drawing section
	Delete drawing element
	Undo delete of drawing element
	Steplength
	Grid/Orthogonalfunction
	Grid
	Empty
	Display toolbox
	Refresh

Designing object:

	Zoom /select zoom area
	Empty
	Change attributes
	Empty
	Copy direction
	Grouping volumes/objects
	Copy
	Undo grouping volumes/objects
	Cut 3D-object
	Insert new 3D-object
	Cut-out in 3D-object
	Save 3D-object
	Rotate 3D-object
	Delete 3D-object
	Mirror 3D-object
	Undo delete 3D-object
	Stretch/shrink of 3D-object
	Steplength
	Edge attributes
	Grid/orthogonalfunction
	Surface styling
	See Volumes/3D-obejcts
	Measure distance
	Refresh

Focus perspective:

	Zoom /select zoom area
	Height, inclination, angle
	Fix position
	Steplength
	Fix direction
	Load settings
	Fix position and direction
	Save settings
	Height, inclination, angle

SWS SoftWare-Systeme GmbH
 Technologiepark 32
 D-33100 Paderborn
 Germany

Tel. +49.(0)52 51 - 16 40-0
 Fax +49.(0)52 51 - 16 40-40

Hotline +49.(0)52 51 - 16 40-10

E Mail info@sws-online.de
 Home www.sws-online.de

